#### MWF+ NTC

Average temperature sensor



#### **Datasheet**

Subject to technical alteration Issue date: 13.03.2023 • A123



## » APPLICATION

Duct averaging temperature sensor in enclosure USE-S for measuring the average temperature in air ducts. The sensor detects the applied temperature value throughout the entire length (with NTC selectively). Mounting angles for uncomplicated duct mounting are included in delivery. A spring at the connection head reduces vibrations.

#### »TYPES AVAILABLE

#### Duct averaging sensor temperature - passive

MWF+ <Sensor> L<x> incl. installation kit

<x>: sensor rod length 3000/6000 mm <sensor>: NTC10k (Pre)/NTC20k

MultiRange: Measuring ranges adjustable at the transducer

## » SECURITY ADVICE - CAUTION

The installation and assembly of electrical equipment should only be performed by authorized personnel.



The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

## » PRODUCT TESTING AND CERTIFICATION



#### **Declaration of conformity**

The declaration of conformity of the products can be found on our website <a href="https://www.thermokon.de/">https://www.thermokon.de/</a>.

Page 2 / 4 Issue date: 13.03.2023

#### » NOTES ON DISPOSAL



As a component of a large-scale fixed installation, Thermokon products are intended to be used permanently as part of a building or a structure at a pre-defined and dedicated location, hence the Waste Electrical and Electronic Act (WEEE) is not applicable. However, most of the products may contain valuable materials that should be recycled and not disposed of as domestic waste. Please note the relevant regulations for local disposal.

### » GENERAL REMARKS CONCERNING TO SENSORS


Especially with regard to passive sensors in 2-wire conductor versions, the wire resistance of the supply wire has to be considered. If necessary the wire resistance has to be compensated by the follow-up electronics. Due to self-heating, the wire current affects the measurement accuracy. So it should not exceed 1 mA.

 
When using lengthy connection wires (depending on the cross section used) the measuring result might be falsified due to a voltage drop at the common GND-wire (caused by the voltage current and the line resistance). In this case, 2 GND-wires must be wired to the sensor - one for supply voltage and one for the measuring current.

#### »TECHNICAL DATA

| Measuring values      | temperature  |
|-----------------------|--|
| Measuring range temp  | 0+50 °C  |
| Accuracy temperature  | ±0,2 K (typ. at 25 °C)   |
| Sensor                | punctual averaging, sensor rod as cable with 4 or 5 measuring points |
| Enclosure             | enclosure USE-S, PC, pure white                                      |
| Protection            | IP65 according to EN60529  |
| Cable entry           | Flextherm M20, for wire Ø=4,59 mm, removable                         |
| Connection electrical | removable plug-in terminal, max 2,5 mm²                              |
| Sensor rod            | 3000 mm, 6000 mm (optional)  |
| Ambient condition     | -30+70 °C, max 85% rH, short term condensation                       |
| Delivery content      | incl. installation set   |

#### » CONNECTION PLAN

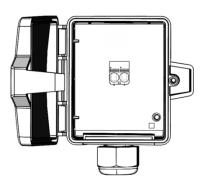




Issue date: 13.03.2023 Page 3 / 4


### » MOUNTING ADVICES

Model MWF can either be mounted directly on the ventilation duct by means of a mounting clip and screws. By means of the mounting brackets included the sensor rod is braced to the ventilation duct.

Note: Please pay attention to the sensor rod while mounting and protect it from mechanical damage!

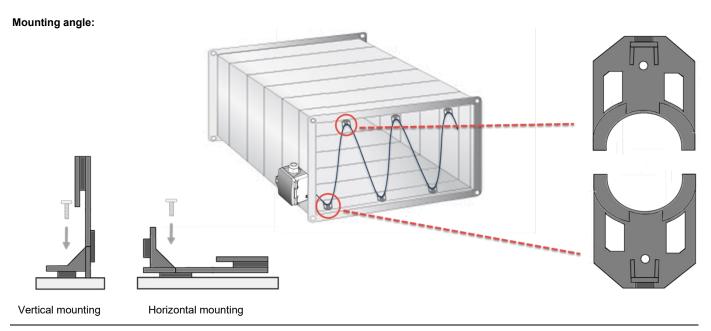

## » DIMENSIONS (MM)

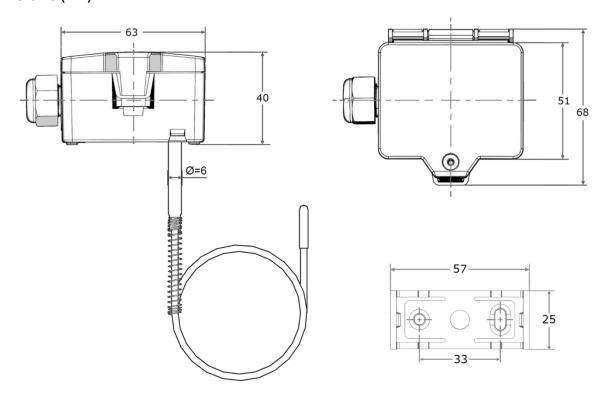

Page 4 / 4 Issue date: 13.03.2023

# » ACCESSORIES (INCLUDED IN DELIVERY)

Mounting base USE-S
Sensor rod mounting bracket set
Mounting kit universal

• Cover screw + screw cover• 2 Rawlplugs • 2 Screws (countersunk head) • 2 Screws (rounded head)

Item No. 667722 Item No. 679466 Item No. 698511

# » ACCESSORIES (OPTIONAL)

Sealing insert M20 USE white, 2x Ø=7 mm (for 2 wire; PU 10 pieces)

Item No. 641333