» SFK02+ FR (LCD) RS485 Modbus

Immersion temperature sensor



Datasheet

Subject to technical alteration Issue date: 8/3/2020 • A110





» APPLICATION

Immersion sensor with hinged lid enclosure USE. Complete and integrated thermowell pocket for temperature measurement of gases and liquids in pipework applications. Display configuration and threshold values for color changes can be parameterized via Thermokon USEapp.

»TYPES AVAILABLE

Immersion sensor optional with display temperature - active RS485 Modbus

SFK02+ FR LCD RS485 Modbus 050.04 SFK02+ FR LCD RS485 Modbus 100.06/04 SFK02+ FR LCD RS485 Modbus 200.06/04

Optional mounting length 1.97/3.94/7.87/9.84/17.8 in

» SECURITY ADVICE - CAUTION



The installation and assembly of electrical equipment should only be performed by authorized personnel.

The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

» PRODUCT TESTING AND CERTIFICATION



Declaration of conformity

The declaration of conformity of the products can be found on our website https://www.thermokon.de/.

Page 2 / 4 Issue date: 8/3/2020

» NOTES ON DISPOSAL



As a component of a large-scale fixed installation, Thermokon products are intended to be used permanently as part of a building or a structure at a pre-defined and dedicated location, hence the Waste Electrical and Electronic Act (WEEE) is not applicable. However, most of the products may contain valuable materials that should be recycled and not disposed of as domestic waste. Please note the relevant regulations for local disposal.

» BUILD-UP OF SELF-HEATING BY ELECTRICAL DISSIPATIVE POWER

Temperature sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power has to be considered when measuring temperature. In case of a fixed operating voltage ($\pm 0.2 \text{ V}$) this is normally done by adding or reducing a constant offset value. As Thermokon transducers work with a variable operating voltage, only one operating voltage can be taken into consideration, for reasons of production engineering. Transducers 0..10 V / 4..20 mA have a standard setting at an operating voltage of 24 V =. That means, that at this voltage, the expected measuring error of the output signal will be the least. For other operating voltages, the offset error will be increased by a changing power loss of the sensor electronics. If a re-calibration should become necessary later directly on the sensor, this can be done by means of the USEapp software and an optional Bluetooth interface.

Remark: Occurring draft leads to a better carrying-off of dissipative power at the sensor. Thus temporally limited fluctuations might occur upon temperature measurement.

»TECHNICAL DATA

Measuring values	temperature			
Output voltage	$010~V~or~05~V,$ min. load $10k\Omega$ (live-zero configuration via Thermokon USEapp)			
Network technology	RS485 Modbus, RTU, half-duplex, baud rate 9.600, 19.200, 38.400 or 57600, parity: none (2 stopbits), even or odd (1 stopbit)			
Power supply	1535 V = or 1929 V ~ SELV With alternating voltage, the correct polarity must be ensured			
Power consumption	max. 2,3 W (24 V =) max. 4,3 VA (24 V ~)			
Output signal range temp. *Scaling analogue output	+40+240 °F (default setting), selectable from 8 temperature ranges-30+130 0+250 +40+140 0+150 +30+480 0+100 +40+240 +40+90 °F, optionally configurable via Thermokon USEapp			
Operating temperature range * Max. permissible operating temperature	sensor pocket -58+320 °F	electronic enclosure -4+158 °F		
Accuracy temperature	± 0.5 K (typ. at 70 °F) , time constant: $T_{63\%}$ 2,5 s			
Display (optional)	LCD 1.14x1.38 in. with RGB backlight			
Enclosure	enclosure USE-M, PC, pure white, cover PC, transparent, with removable cable entry, UV resistant			
Protection	IP65 according to EN 60529			
Cable entry	M25, for wire max. Ø=0.28 in., seal insert for fourfold cable entry			
Connection electrical	Mainboard removable plug-in terminal, max. 14AWG	Plug-in card removable plug-in terminal, max. 16AWG		
Pocket	stainless steel V4A, Ø=0.24 0.16 in., mounting length: 1.97 3.94 7.87 11.8 in., thread R 1/2" max. operating pressure 10 bar (145psi)			
Ambient condition	max. 85% rH short term condensation			

When several BUS devices are supplied by one 24 V AC voltage supply, it is to be ensured that all "positive" operating voltage input terminals (+) of the field devices are connected and all "negative" operating voltage input terminals (-) (=reference potential) are connected (in-phase connection of field devices). In the case of reversed polarity at one field device, a supply voltage short-circuit would be caused by that device.

The consequential short-circuit current flowing through this field my cause damage to it. Therefore, pay attention to correct wiring.

»USE ENCLOSURE WITH UV AND WEATHER RESISTANCE

After some time, outdoor mounted plastics can lose their color and quality. Therefore, all USE housings are made of special white polycarbonate (PC). The light-stable colorants and additives are used to achieve optimum protection of the polymer while maintaining color stability. The titanium dioxide used is specially developed for polycarbonate and offers excellent UV protection through the reflection of the entire light spectrum including the UV component by 340 nm. This effectively counteracts the otherwise occurring photochemical polymer degradation. The colors stay full for a long time without fading. The material is also resistant to cold and frost.

Issue date: 8/3/2020 Page 3 / 4

» CONFIGURATION



The Thermokon bluetooth dongle with micro-USB is required for communication between USEapp and USE-M / USE L (Item No..: 668262). Commercial bluetooth dongles are not compatible.


Application-specific reconfiguration of the devices can be carried out using the Thermokon USEapp. The configuration is carried out in the voltage-supplied state.


The configuration-app and the app description can be found in the Google Play Store or in the Apple App Store.

» CONNECTION PLAN

To change the output voltage range (default 0..10 V to 0..5 V) via jumper, the display must be removed from the board first. If the RS485 cable is looped through, connect both cable shields using the enclosed 2-pol. Connect terminal as shown.

SFK02+ FR (LCD) RS485

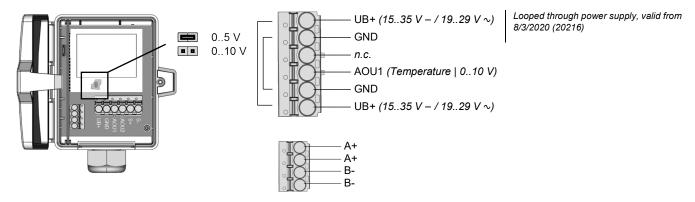

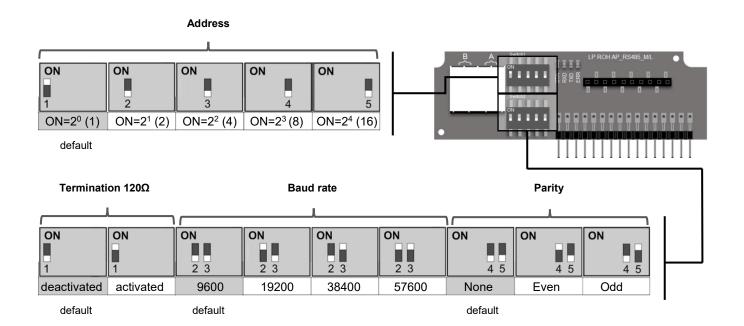

Page 4 / 4 Issue date: 8/3/2020

Register 400 = 1 (unit SI)

Address	Access	Description	Resolution / Unit		
0	R	Temperatur	SI	0.1	°C

Register 400 = 2 (unit Imperial)

A	Address	Access	Description	Resolution / Unit		
	0	R	Temperatur	Imperial	0.1	°F

The modbus address of the device is set in the range of 1 ... 31 (binary encoded) using a 5-pole DIP switch. With address 0 via DIP, an extended address range (32...247) is available via USEapp.



Modbus addresses:

USE-RS485 Modbus Interface

A detailed description of the Modbus addresses can be found under the following link:

→ **Download**


» APPLICATION NOTICE



The housing cover must be completely closed in order to ensure the accuracy and reproducibility of the measured values during a test or service log via USEapp.

The Bluetooth dongle snaps into the socket easily. When removing, please fix the plug-in card (option PCB) so that it is not unintentionally pulled out.

» DIMENSIONS (IN.)

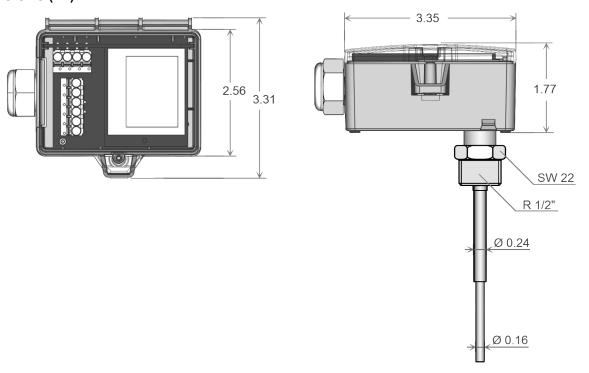

» ACCESSORIES (INCLUDED IN DELIVERY)

Mounting kit universal Item No. 698511

• Cover screw + screw cover• 2 Rawlplugs • 2 Screws (countersunk head) • 2 Screws (rounded head)

» ACCESSORIES (OPTIONAL)

Bluetooth dongle
Converter RS485 Modbus-USB incl. driver CD

Item No. 668262 Item No. 668293